
niglon Control & Automation MOTOR CONTROL GEAR STANDARD CONTACTOR 40A 3 POLE AC COIL 35C4024, 35C40110, 35C40240, 35C40415

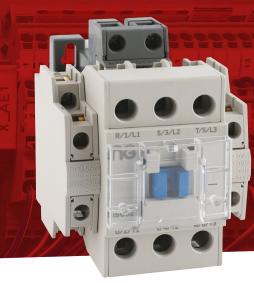

3 pole contactors are for the control of electric motors, and have auxiliary contacts fitted. Din rail mounting

| General Characteristics | |
|--------------------------------|------------------------|
| Standards | BS EN 60947-4, UL-508 |
| AC-3 Rated Load | 40A |
| AC-3 Rated Power @ 415V | 18.5kW |
| Rated Operational Voltage (Ue) | ≥ 690V |
| Main Contact Configuration | 3 Pole NO |
| Maximum Operation Frequency | 1800 per hour |
| Mechanical Endurance | 15 000 000 ops |
| Electrical Endurance | 2 000 000 ops |
| Width | 68mm |
| Height | 82mm |
| Depth | 95mm |
| Terminal Capacity | 4 to 16mm2 |
| Tightening Torque | 4 Nm |
| Weight | 0.85Kg |
| Weight | 0.85Kg |
| Coil Characteristics | |
| Available Coil Voltages | 24VAC, 110VAC, 230VAC |
| Inrush Current | 95 VA |
| Sealed Current | 9 VA |
| Pull-in Voltage | 80 - 110 % |
| Thermal Dissipation | 2W |
| Closing time | 11 - 19 ms |
| Available Accessories | |
| ALIVO/2EM | Auxilliary Contact 2NC |

| Closing time | 11 - 19 ms |
|-----------------------|-----------------------------------|
| Available Accessories | |
| AUXO/2FM | Auxilliary Contact 2NC |
| AUX1/1FM | Auxilliary Contact 1NO/1NC |
| AUXO/4FM | Auxilliary Contact 4NC |
| AUX1/3FM | Auxilliary Contact 1NO/3NC |
| AUX2/2FM | Auxilliary Contact 2NO/2NC |
| AUX3/1FM | Auxilliary Contact 3NO/1NC |
| AUX4/0FM | Auxilliary Contact 4NO |
| AUXO/1SM | Auxilliary Contact 1NC side mount |
| AUX1/OSM | Auxilliary Contact 1NO side mount |
| 4PMI135 | Mechanical Interlock |

| Available Accessories | |
|---------------------------------|---------------|
| Manual Motor Starter MMS0.16 | 0.1 - 0.16 A |
| Manual Motor Starter MMS0.25 | 0.16 - 0.25 A |
| Manual Motor Starter MMS0.4 | 0.25 - 0.4 A |
| Manual Motor Starter MMS0.6 | 0.4 - 0.63 A |
| Manual Motor Starter MMS1.0 | 0.63 - 1.0 A |
| Manual Motor Starter MMS1.6 | 1.0 - 1.6 A |
| Manual Motor Starter MMS2.5 | 1.6 - 2.5 A |
| Manual Motor Starter MMS4.0 | 2.5 - 4 A |
| Manual Motor Starter MMS6.0 | 4 - 6 A |
| Manual Motor Starter MMS10 | 6 - 10 A |
| Manual Motor Starter MMS13 | 9 - 13 A |
| Manual Motor Starter MMS17 | 11 - 17 A |
| Manual Motor Starter MMS22 | 14 - 22 A |
| Manual Motor Starter MMS26 | 18 - 26 A |
| Manual Motor Starter MMS32 | 22 - 32 A |
| Thermal Overload ORSC0.16 | 0.1 - 0.16 A |
| Thermal Overload ORSC0.25 | 0.16 - 0.25 A |
| Thermal Overload ORSCO.4 | 0.25 - 0.4 A |
| Thermal Overload ORSC0.63 | 0.4 - 0.63 A |
| Thermal Overload ORSC1.0 | 0.63 - 1.0 A |
| Thermal Overload ORSC1.6 | 1.0 - 1.6 A |
| Thermal Overload ORSC2.5 | 1.6 - 2.5 A |
| Thermal Overload ORSC4 | 2.5 - 4 A |
| Thermal Overload ORSC6 | 4 - 6 A |
| Thermal Overload ORSC8 | 5 - 8 A |
| Thermal Overload ORSC9 | 6 - 9 A |
| Thermal Overload ORSC10 | 7 - 10 A |
| Thermal Overload ORSC13 | 9 - 13 A |
| Thermal Overload ORSC18 | 12 - 18 A |
| Thermal Overload ORSC22 | 16 - 22 A |
| | |

Additional Information

This product is for use by skilled persons or instructed persons. The installation of this product must comply with current IEE regulations. Terminals, including those factory fitted, must be checked for correct tightness before commissioning. All terminals should be periodically checked for correct tightness. The data herein serves only to describe the product and should not be regarded as representing guaranteed properties in the legal sense. We reserve the rights of modification, whilst every care has been take in ensuring the accuracy of this catalogue, the Supplier accepts no liability whatsoever for any eventuality arising from errors or omissions within its catalogues, brochures or within any online presence.

22 - 32 A


28 - 40 A

Thermal Overload ORSC32


Thermal Overload ORSC40

niglon Control & Automation MOTOR CONTROL GEAR STANDARD CONTACTOR 40A 3 POLE AC COIL

Technical Drawing

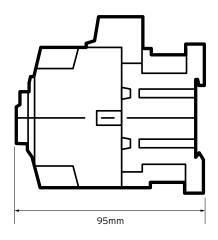

Wiring Diagram

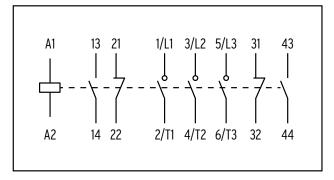

*1 - Optional axillary contact unit

Additional Information

This product is for use by skilled persons or instructed persons. The installation of this product must comply with current IEE regulations. Terminals, including those factory fitted, must be checked for correct tightness before commissioning. All terminals should be periodically checked for correct tightness. The data herein serves only to describe the product and should not be regarded as representing guaranteed properties in the legal sense. We reserve the rights of modification, whilst every care has been take in ensuring the accuracy of this catalogue, the Supplier accepts no liability whatsoever for any eventuality arising from errors or omissions within its catalogues, brochures or within any online presence.